



Automatic Gen-Set Controllers with Transfer Switching



CanBus J1939 ECU communication

Parameter configuration via USB port of your notebook

Authorised access, secure communication

Selectable second language

Log last 50 events & alarm information with measured values

Statistics records

Mains and Generator phase sequence control

Remote Start/Stop, Speed and Idle mode control via J1939

Power factor measurement for 3 phases

4 resistive sender inputs for Level, Temperature, Oil Pressure and Spare

Selectable Resistive sender types; Pt-100, VDO, US, GM, Ford, Datcon, etc..

Speed sensing from alternator voltage or magnetic pickup

3 phase Load current and earth current measurement

Configurable 7 inputs and 4 outputs

ECU power, ECU stop, Stop or Fuel solenoid selection

Programmable weekly working permit calendar

Maintenance warning, Red (Shutdown) and Yellow (Warning) alarm lights

Navigation and Shortcut buttons for easy use

Exercise at daily programmed time intervals

Load Test selection

Automatic transfer switching control and engine control

Compatible to Diesel or Gas generators

Auto, Manual and Test modes

Active, Reactive, Apparent power measurement

Adjustable Start and Stop timers

SPN, FMI and OC values reading from engines via J1939

Pre-Alarm

Engine temperature
Oil pressure
Fuel level
Over / Under troquence

Over / Under frequency
Over / Under speed

Warning & Electrical trip

Earth fault
Over current
Short circuit

Alarm

Mains breaker not opened Fuel level
Mains breaker not closed Battery low
Generator breaker not opened Battery high
Generator breaker not closed Maintenance

Controls

Idle mode

Fuel and Stop solenoid ECU power and stop Starter motor Automatic generator start Load transfer to mains Preheat External alarm horn Engine cooling

Fail Monitoring

Emergency stop
Failed to start
Low oil pressure
High temperature
Speed failure
Voltage failure
Charging fail
Shutdown
Warning


Error

Over / Under speed Speed loss Earth fault Fuel level Battery low Battery high Maintenance Over current Short circuit Engine stop CanBus

Charge alternator





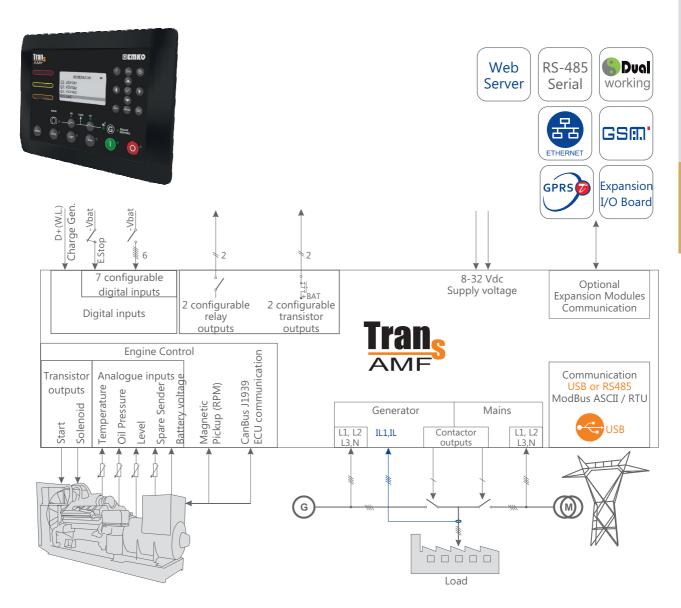

Dimensions : 229mm x 152mm x 41mm

Panel Cut-Out : 182mm x 135mm

Protection : Ip65 at front panel

Weight : Approximately 0,53Kg

Operating/Storage Temperatur20°C to +70°C / -30°C to +80°C

DC battery supply voltage : 8 to 32Vdc, max. operating current is 360mA

CT secondary : 5A

Sender Measurement : 0 to 1300 ohm, accuracy: 1%FS, resolution: 1 ohm

Order Information	
Trans-AMF	Automatic Gen-Set controller with transfer switching, LCD display, J1939 ECU communication
Trans-AMF.RS485	Automatic Gen-Set controller with transfer switching, LCD display, J1939 ECU communication, RS485 communication